


Framebag tutorial



PHOTO.2.

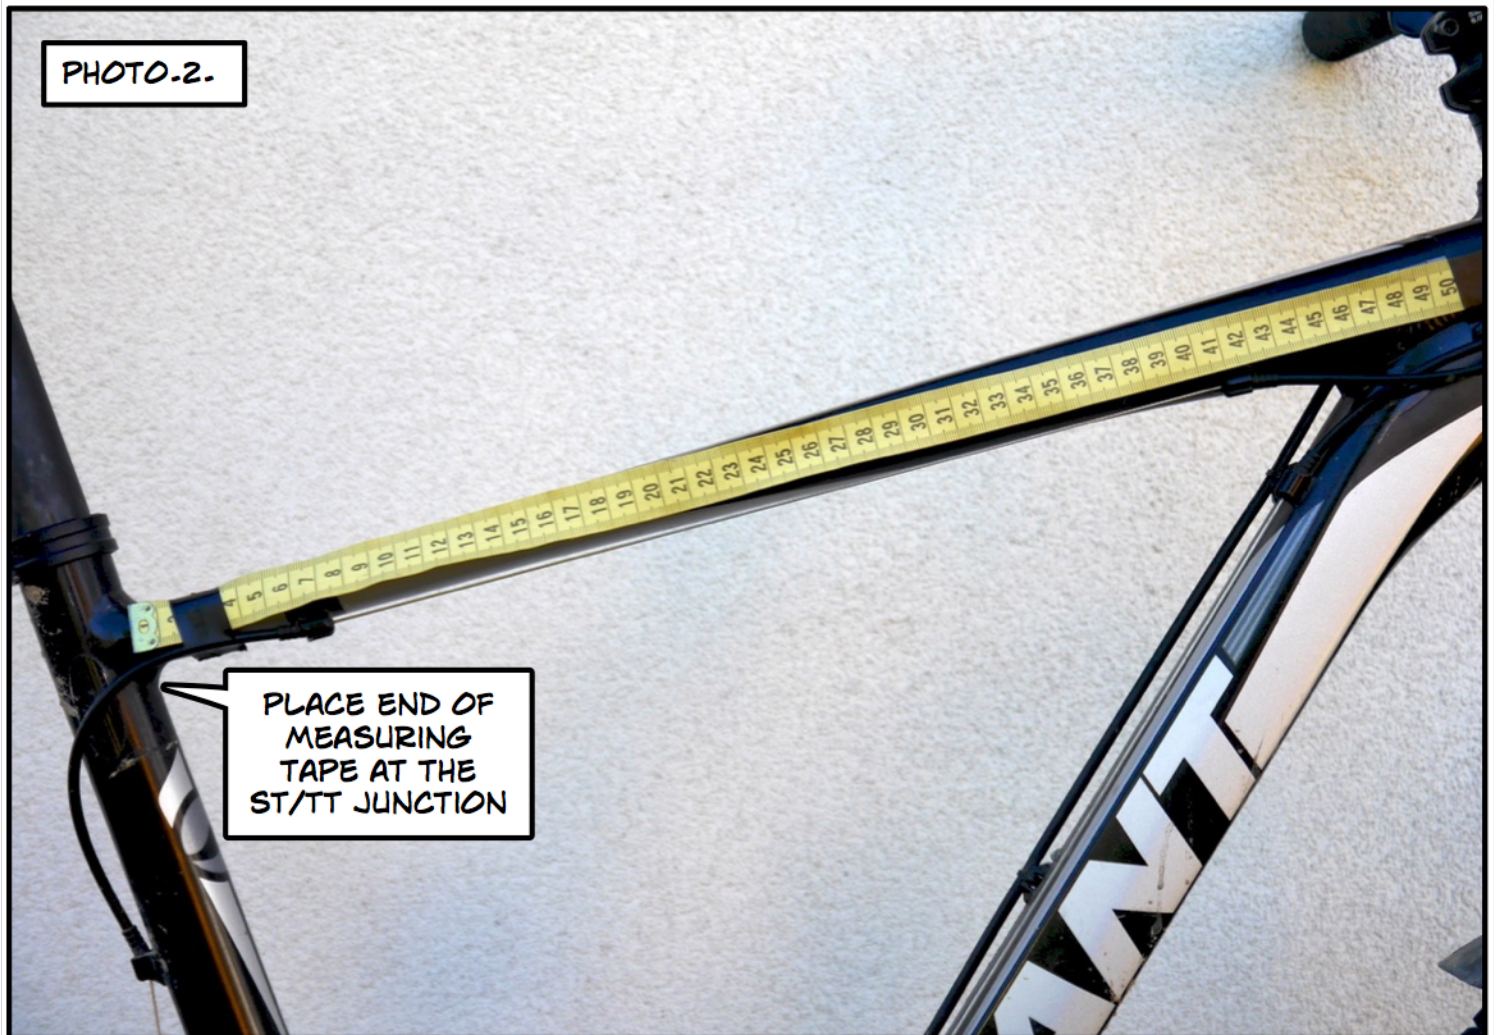

1. TAPE A RULER TO THE DRIVE SIDE OF YOUR TOP-TUBE. AVOID COVERING UP ANY INSIDE EDGES OF YOUR FRAME'S TRIANGLE WITH THE RULER AND ROTATE THE FRONT PEDAL OUTSIDE THE AREA OF YOUR TRIANGLE.

- FOR HALF FRAMEBAGS THAT WILL FIT AROUND YOUR WATER BOTTLE(S) PLEASE PLACE YOUR WATER BOTTLES IN THE CAGES.
- FOR ALL OTHER FULL FRAMEBAGS PLEASE REMOVE THE DOWNTUBE WATER BOTTLE CAGE AND UNTHREAD THE DOWNTUBE WATER BOTTLE SCREWS ABOUT HALF WAY.

2. POSITION YOUR BIKE SO IT'S STANDING STRAIGHT UP, WITH THE DRIVE-SIDE FACING YOU. A HANDLEBAR AGAINST A WALL WORKS WELL. WHEELS SHOULD BE PARALLEL WITH THE WALL.

3. SIT ON THE GROUND. THIS IS THE #1 SKIPPED STEP. PLEASE DO NOT TAKE A PICTURE STANDING, LOOKING DOWN ON YOUR BIKE.

4. POSITION YOUR CAMERA'S VIEW DEAD-CENTER WITHIN YOUR FRAME'S TRIANGLE, DIRECTLY FROM THE SIDE. ENSURE YOUR FULL WHEELS ARE IN THE PICTURE. IF THEY ARE NOT, YOU'RE TOO CLOSE TO THE BIKE. TAKE PHOTO 1.

5. SLIDE FORWARD FOR A CLOSE-UP OF THE ENTIRE TOP-TUBE. TAKE PHOTO 2.

6. IF YOUR BIKE HAS CABLES ENTERING OR EXITING THE FRAME ON THE NON-DRIVE SIDE (OR ANY OTHER NDS FEATURES THAT LIMITS STRAP PLACEMENT), REPEAT STEPS 1-4 FOR THE NDS SIDE PHOTO.

7. WITH YOUR ORDER NUMBER IN THE SUBJECT LINE, EMAIL THE HIGHEST RESOLUTION OPTION OF YOUR PHOTOS TO SKLEP@BIKEPACK.PL.